
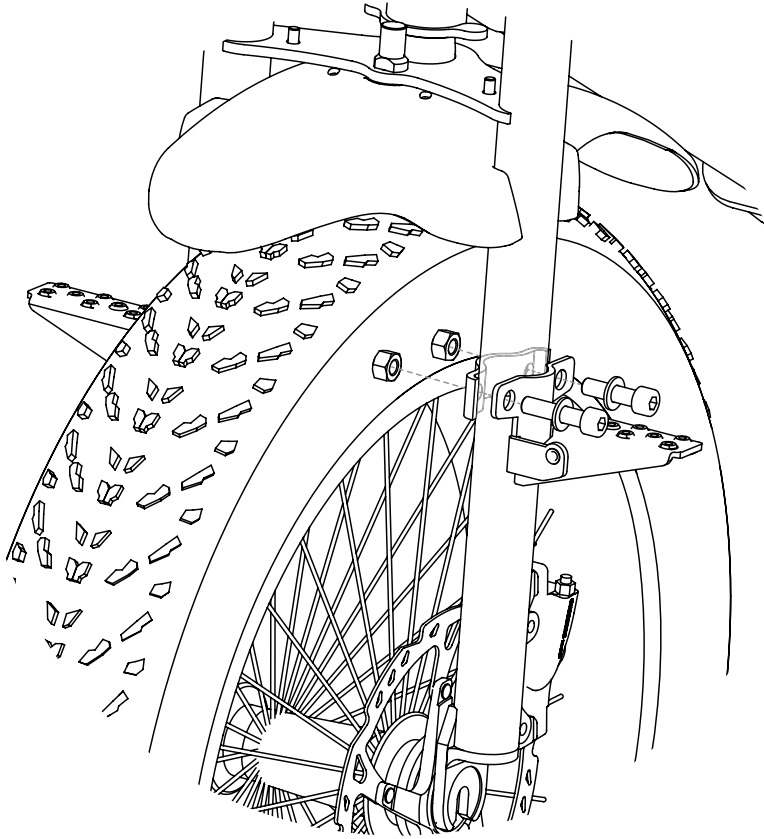


# MONTAGE FUSSRASTEN

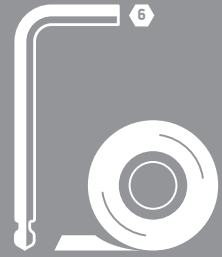

## BENÖTIGTES WERKZEUG

- Festeres Klebeband oder Gummiband
- Inbusschüssel Gr. 6


**1**

Die **gewünschte Stelle**, an der die Fußraste montiert werden soll, **säubern** und mit **festen Klebeband** oder einem Gummidichtungsband abkleben damit der Lack durch die Montage nicht beschädigt wird.

**2**

Fußraste an die **gewünschte Stelle** des Gabelholms und Gegenstück auf gleicher Höhe hinter dem **Gabelholm anbringen** und festhalten.

**3**

Beide Schrauben **handfest** und gleichmäßig **festziehen**.

**4**


Im letzten Schritt die Schrauben mit ca. **8-10 Nm gleichmäßig festziehen** und die Fußrasten auf festen Halt prüfen.

**RUFF CYCLES®**

RUFF CYCLES GmbH  
Im Gewerbepark D36  
93059 Regensburg  
Germany


Phone: +49-941-599 395 17  
eMail: support@ruff-cycles.com  
Web: www.ruff-cycles.com

# ASSEMBLY FOOTRESTS

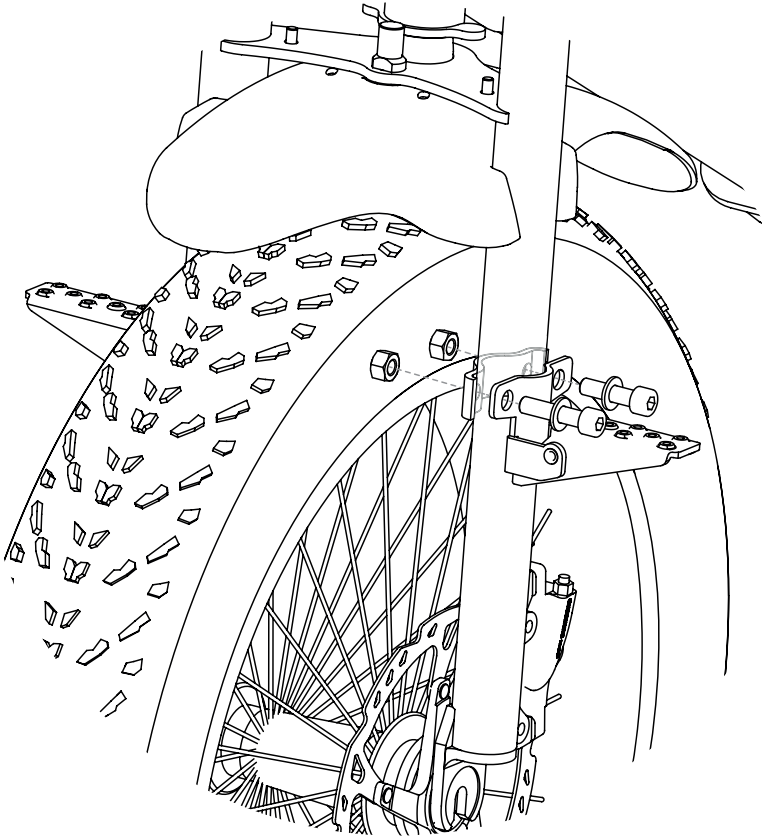

## REQUIRED TOOLS

- Strong tape or rubber sealing tape
- Allen Key Size 6

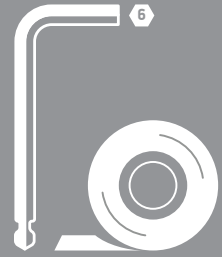**1**

**Clean** the desired position where the footrests should be mounted and **cover** the fork tube with **strong tape** or a rubber sealing tape in order to **prevent any damages** to the paint.

**2**

Place the footrest to the **desired position** on the fork tube and the counterpart at the same height behind the fork tube. Hold it there in place.

**3**

**Tighten** both **screws** evenly and hand tight.

**4**

In the last step, tighten the screws evenly with approx. **8-10 Nm** and check that these are secure.